




- 1 Press button on key. Red LED will blink once to indicate key is functional with no security code currently programmed.

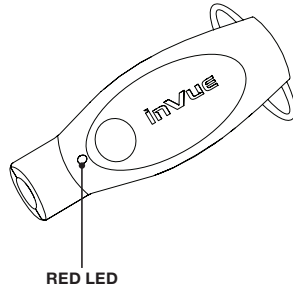


- 2 Remove protective cap from CT Key Fob (CTKF001) and insert in slot in back of key with the bar code facing down.

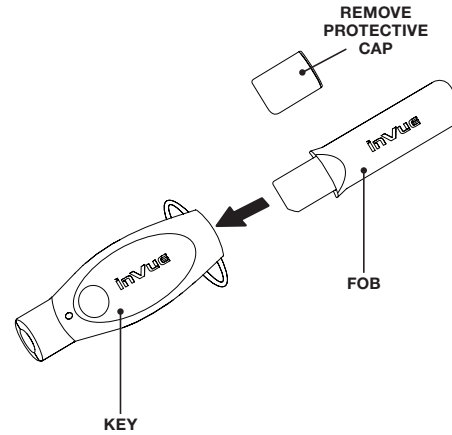


- 3 Confirm fob is flush with key. Press button of key to transfer security code. The green LED will blink twice when code has been correctly read.

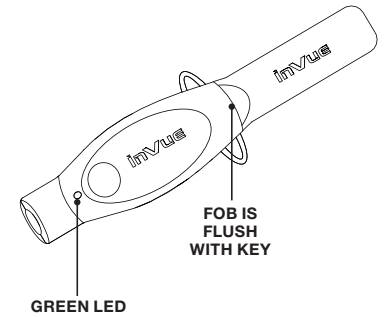


- 4 Remove fob from key. If using the same fob to program additional keys, repeat steps 1-4.

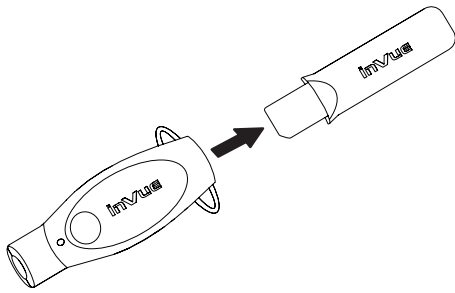

- 5 Replace protective cap on fob. Return fob to packaging and store in a secure location.

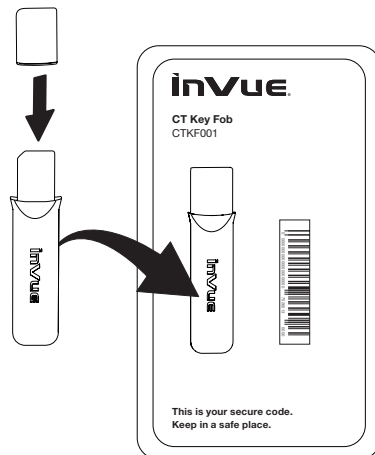


- 6 Place key against IR window of new InVue product. Press button to transfer secure code to product. The green LED will blink once to confirm a successful transfer.

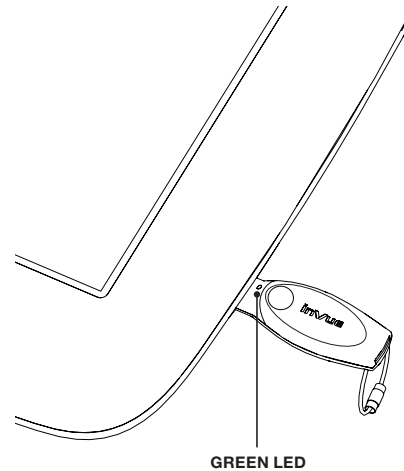

SD0330 Rev0 02/23/16

If key button is pressed and LED blinks 5 times, the battery is near end of life. Please order a replacement key.

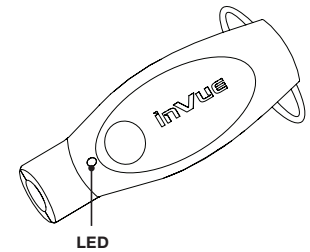

# INVUE

[www.invue.com](http://www.invue.com)

NA / LATAM // 704.752.6513 • 888.55.INVUE  
EMEA // +31.23.8900150  
APAC // +852.3127.6811