




▼ Zips Modular - Shaver Puck Installation

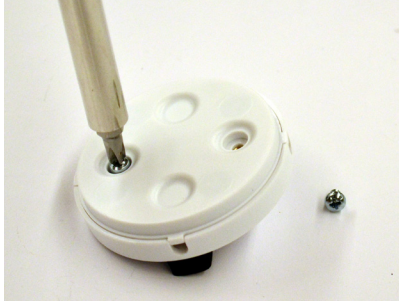

- 1 Use a Philips head screwdriver to remove the 2 screws from the bottom of the shaver puck.

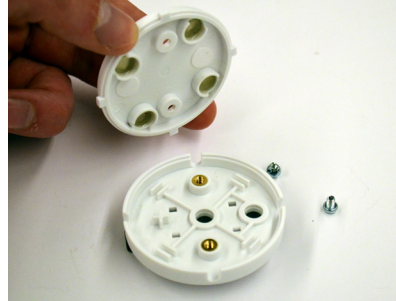


- 2 Separate the 2 halves of the puck.

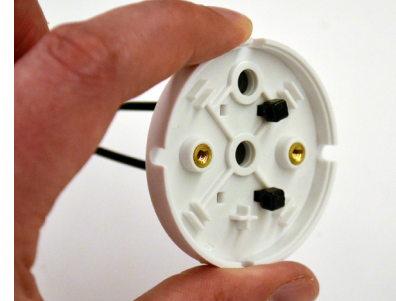


- 3 Insert the 2 zip ties through the underside of the puck's top half.



- 4 Center the shaver on the foam block.

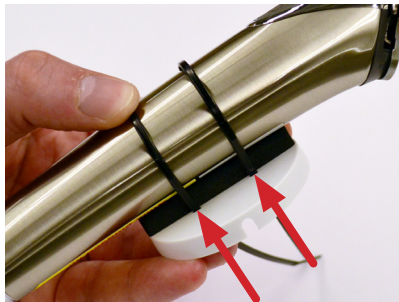

- 5 Loop the zip ties over the shaver and insert them through the holes in the puck.

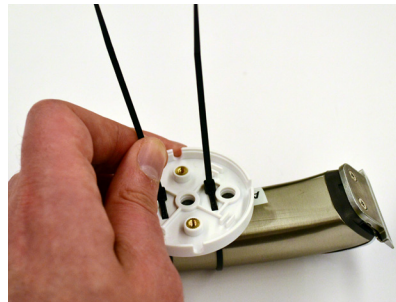

- 6 Pull the zip ties tight against the shaver.



- 7 Use a pair of scissors to trim the excess zip tie.




- 8 Use the provided alcohol wipe to clean somewhere inconspicuous on the shaver where a sensor can be placed. Allow it to dry completely.


Zips Modular - Shaver Puck Installation



- 9** Peel the clear film from the adhesive on the sensor.

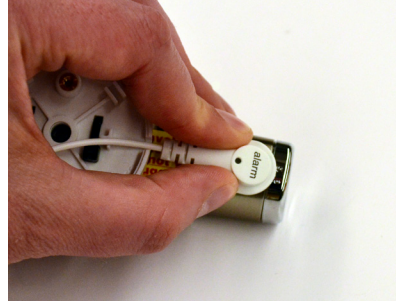


- 10** Place the sensor on the cleaned area on the shaver. Apply pressure for at least 10 seconds.

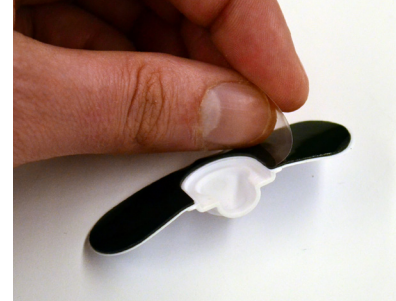


- 11a** **Optional:**
If using a flex adhesive, peel the clear film from the adhesive.




- 11b** Place the adhesive over the sensor.

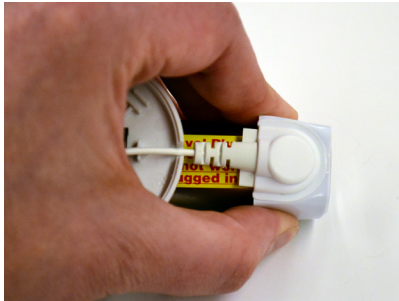


- 11c** Fold the adhesive around the shaver. Apply pressure for at least 10 seconds.

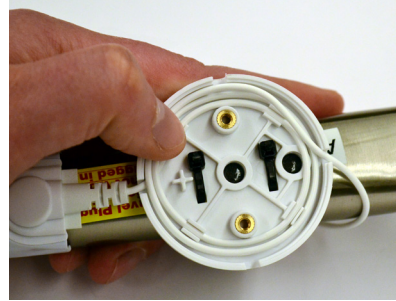

- 12** Route the cable around the inside of the puck similar to the image above.

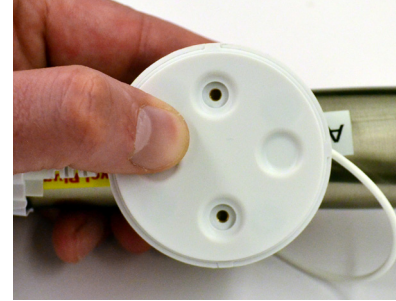

- 13** Replace the bottom half of the puck.

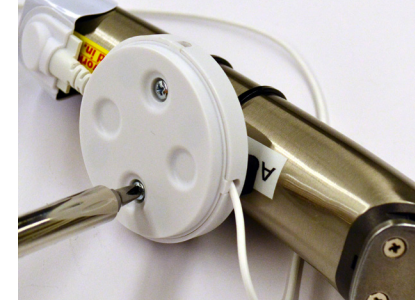

- 14** Insert and tighten the 2 screws with a Phillips head screwdriver to secure the 2 halves of the puck.

Zips Modular - Shaver Puck Installation



- 15** Plug the sensor into the alarm unit.



- 16** Place the shaver and puck onto the stand.