

## Bộ sạc Apple WS2/MW2000 ZW1041



**1** Gỡ lớp keo dính ở mặt dưới của giá đỡ thiết bị đeo WS2/MW2000.



**2** Luôn cấp nguồn của giá đỡ xuống qua lỗ ở đế của Bộ sạc.




**3a** Đặt giá đỡ lên đế của Bộ sạc




**3b** Nếu sử dụng với giá đỡ cấp WS2, hãy đảm bảo rằng cáp cảm biến đi ra qua khe mở ở phía sau của Bộ sạc. Không luôn cấp cảm biến qua lỗ ở phía dưới của Bộ sạc



**4** Đảm bảo rằng các lỗ vít được căn thẳng hàng.

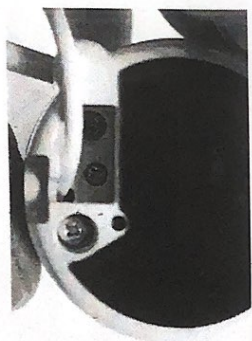

**5** Vặn vít nhỏ vào lỗ

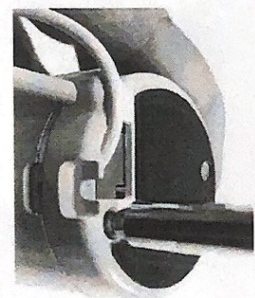

**6** Siết chặt vít bằng tua vít đầu Philips.



**7** Sử dụng đầu vặn T8 để nới lỏng vít có định khung đỡ cũ vào giá đỡ.

# INVUE

Để hỗ trợ kỹ thuật, vui lòng gọi  
NA / LATAM // 704.752.6513 • 888.55.INVUE  
EMEA // +31.23.8900150  
APAC // +852.3127.6811



## Thiết bị sặc Apple WS2/W2000 ZW1041



8 Tháo bỏ Khung đỡ cũ.



9 Đặt khung đỡ của Bộ sặc lên giá đỡ.



10 Luồn vít dài vào lỗ ở bên hông của giá đỡ.



11 Vận chặt vít bằng đầu vận TT8.




12 Cắm nút nhỏ vào lỗ vít.



13 Sử dụng miếng lau còn được cung cấp để làm sạch khu vực nơi giá đỡ sẽ được đặt. Đợi cho đến khi khu vực đó khô hoàn toàn.



14 Sử dụng miếng lau còn để làm sạch thân trụ. Đợi cho đến khi nó khô hoàn toàn.

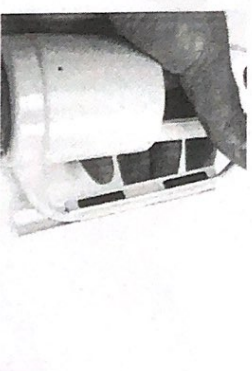


15 Đặt bộ quản lý cáp lên trên dây cáp của Bộ sặc.

# INVUE

## Bộ sạc Apple WS2/W2000 ZW1041




**16** Bóc lớp màng trong suốt khỏi hai miếng dán trên bộ quản lý cáp..

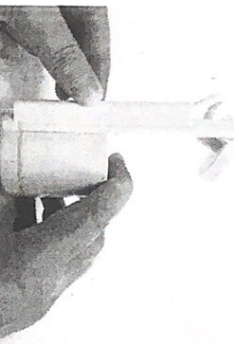

**17** Căn chỉnh bộ quản lý cáp với thân giá đỡ. Điều chỉnh cáp sao cho phần dây chùng ra ở phía trên của bộ quản lý cáp..



**18** Nhấn bộ quản lý cáp vào thân giá đỡ trong ít nhất 10 giây..

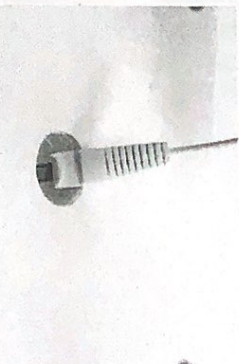

**19** Tùy chọn:  
Luôn cáp nguồn của giá đỡ qua lỗ hoặc khe trên thiết bị có đính.



**20** Bóc lớp màng trong suốt khỏi miếng dán ở đáy của Bộ Sạc.




**21** Đặt giá đỡ lên thiết bị có đính và ấn giữ trong ít nhất 10 giây.



**22** Cắm cáp nguồn của giá đỡ vào nguồn điện phù hợp với loại giá đỡ..

- PS515 dùng cho các giá đỡ W2000.
- Các Bộ Bảo Động Zips có nguồn điện hoặc Hộp Nguồn/Bảo Động S2865 dùng cho các giá đỡ WS2.

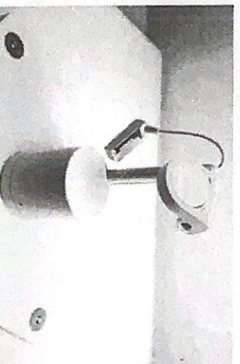

**23** Vị trí hiển đã sẵn sàng để trưng bày sản phẩm. Tham khảo hướng dẫn kèm theo cảm biến của bạn để biết đầy đủ thông tin cài đặt.

**Ghi chú:** Đảm bảo rằng đai kẹp được sử dụng không chứa nam châm vì điều này có thể gây nhiễu cho Bộ Sạc

SD097Z Rev0 06/01/24

# INVUE

3

Để hỗ trợ kỹ thuật, vui lòng gọi  
NA / LATAM // 704.752.6513 • 888.55.INVUE  
EMEA // +31.23.8900150  
APAC // +852.3127.6811

**VĂN PHÒNG DỊCH THUẬT VHD CHỨNG NHẬN**  
Bà Lưu Thị Diệp – Công tác viên Văn phòng dịch thuật  
VHD- đã dịch văn bản này.  
Số CN: 1110 Quyển số: 10 SCN/BD-VHD  
Hà Nội, ngày 11 tháng 10 năm 2025



*[Handwritten signature]*


**P. TRƯỞNG PHÒNG TC-HC**  
*Nguyễn Bích Ngọc*

Tôi Lưu Thị Diệp Căn cước công dân số: 038191047858, cấp ngày  
28.09.2021 tại Cục Cảnh sát quản lý hành chính về trật tự xã hội, cam đoan đã  
dịch chính xác văn bản đính kèm từ tiếng Anh sang tiếng Việt.

Ngày: 11.10.2025  
Người dịch

Lưu Thị Diệp


*[Handwritten signature]*




## WS2/W2000 Apple Charging Module ZW1041



- 1** Remove the adhesive from the bottom of the WS2/W2000 wearable stand.

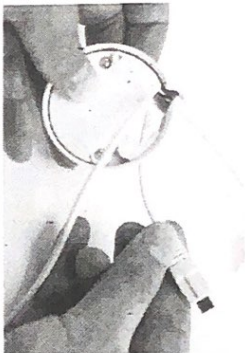


- 2** Route the stand's power cable down through the hole in the base of the Charging Module.

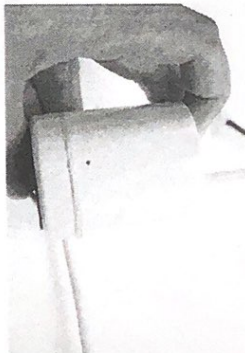


- 3a** Place the stand onto the Charging Module base.




- 3b** If using with a WS2 exposed cable stand, ensure that the sensor cable emerges through the opening in the back of the Charging Module. Do not route the sensor cable through the hole in the bottom of the charging module.

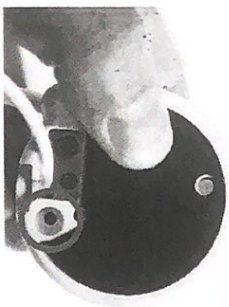

- 4** Ensure that the screw holes are aligned.

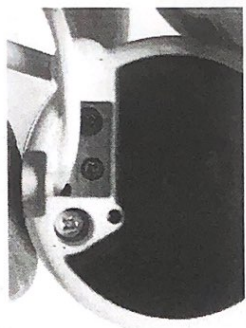

- 5** Insert the small screw into the hole.

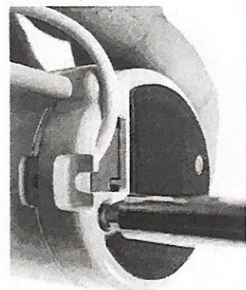

- 6** Tighten the screw using a Phillips head screwdriver.



- 7** Use a T18 bit to loosen the screw holding the old cradle to the stand.

# INVUE.

For technical assistance call  
**NA / LATAM // 704.752.6513 • 888.55.INVUE**  
**EMEA // +31.23.8900150**  
**APAC // +852.3127.6811**

## WS2/W2000 Apple Charging Module ZW1041



**8** Remove the old cradle.



**9** Place the Charging Module cradle onto the stand.



**10** Insert the long screw into the hole in the side of the cradle.



**11** Tighten the screw using a T18 bit.




**12** Insert the small plug into the screw hole.



**13** Use the provided alcohol wipe to clean the area where the stand will be placed. Allow it to dry completely.



**14** Use the alcohol wipe to clean the stem. Allow it to dry completely.

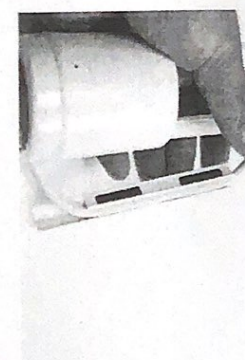

**15** Place the cable manager over the Charging Module cable.

# INVUE.

For technical assistance call  
NA / LATAM // 704.752.6513 • 888.55.INVUE  
EMEA // +31.23.8900150  
APAC // +852.3127.6811

## WS2/W2000 Apple Charging Module ZW1041




- 16** Peel the clear film from the 2 adhesives on the cable manager.



- 17** Align the cable manager to the stem. Adjust the cable so that the slack emerges from the top of the cable manager.



- 18** Press the cable manager against the stem for at least 10 seconds.

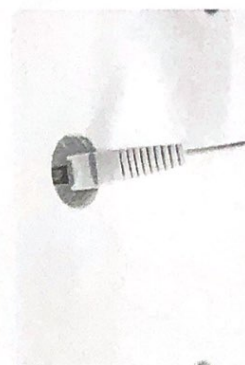

- 19** **Optional:** Route the stand's power cable through a hole or slot in the fixture.




- 20** Peel the clear film from the adhesive on the base of the Charging Module.



- 21** Place the stand onto the fixture and apply pressure for at least 10 seconds.



- 22** Plug the stand's power cable into power appropriate for the stand.
- PS515 for W2000 stands.
  - Powered Zips Alarm Units or S2865 Power/Alarm Boxes for WS2 stands.

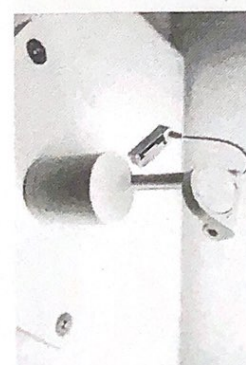

- 23** The position is now ready to be merchandised. Consult the instructions include with your sensor for full installation information.
- Note:** Ensure that the band clamp used does not contain any magnets as this may cause interference with the Charging Module.

SD0917 Rev0 08/01/24

# INVUE.

3

For technical assistance call  
NA / LATAM // 704.752.6513 • 888.55.INVUE  
EMEA // +31.23.8900150  
APAC // +852.3127.6811

CTINHH\*ION