






Clean the back of the merchandise with the provided alcohol wipe. Let it dry completely.

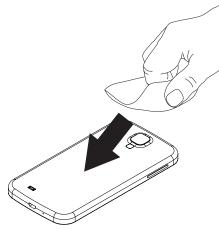




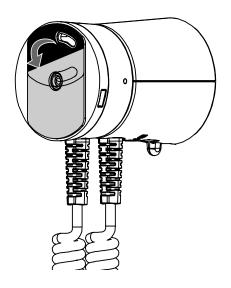




## **Optional:**


If using an LSE plate, center the LSE plate on the sensor as shown below. Apply pressure for at least 10 seconds.

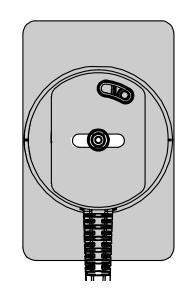

(3b Remove the paper backing from the LSE plate.

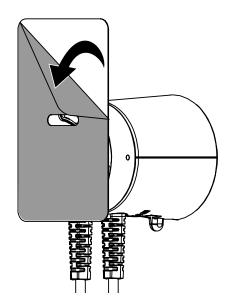

Center the merchandise on the sensor (and LSE plate if used) and apply pressure for at least 10 seconds.

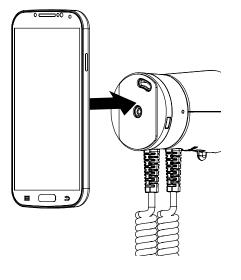



## **Optional:**

A Zips! basic loop sensor (ZA3002) can be used with the anchor on the back of the stand. Thread the loop through the anchor, pull through and attach the alarm end to the merchandise. Please see the instructions included with the loop sensor (ZA3002) for more details.

