




Zips! 2.0 Mouse Flex Service Kit ZA2905-W

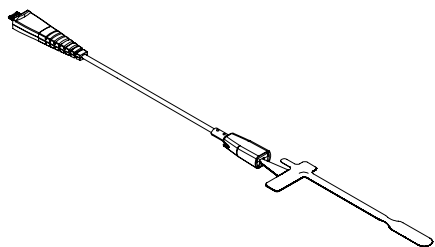


- 1 Clean the bottom of the mouse with a provided alcohol wipe and allow to dry completely.

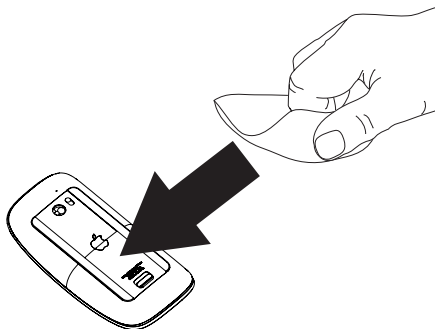


- 2 Remove the liner from the flex and apply to the mouse.
Note: Take care to adhere the tear section over the mouse body and battery cover seam and to not cover any charging ports.

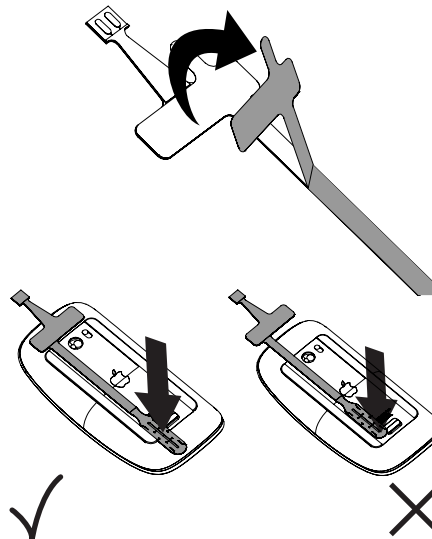


- 3 Grab sides of the cover on the sensor and pull back to expose the metal contacts.

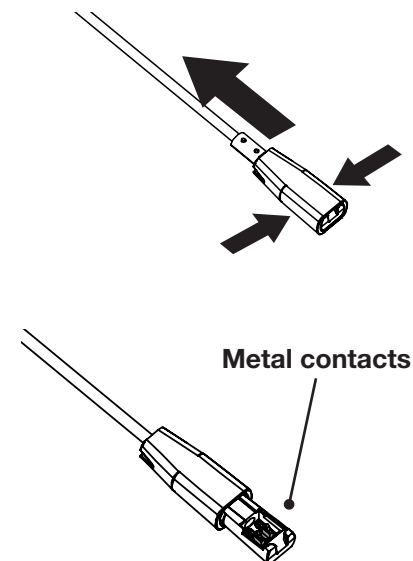



- 4 Align the metal contacts on the the sensor with the pads on the flex.

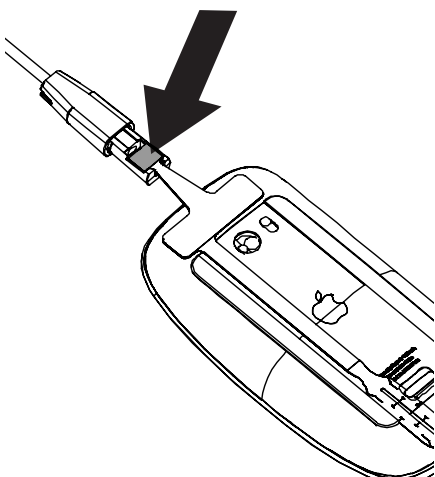

- 5 Slide the cover back over the flex and contacts until the cover clicks in place.

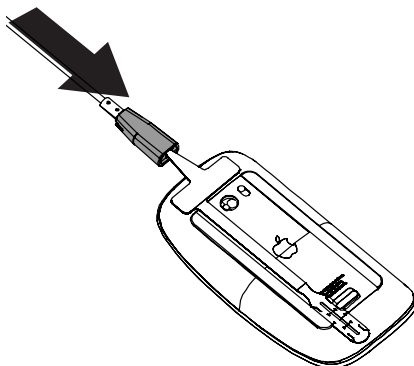

- 6 Plug the micro USB connector into a Zips! 2.0 alarm unit. The alarm unit will chirp.

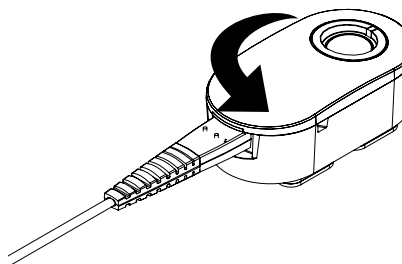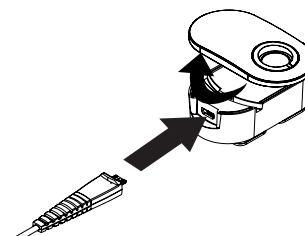

SD0429 Rev1 03/14/17

INVUE.

www.invue.com

NA / LATAM // 704.752.6513 • 888.55.INVUE

EMEA // +31.23.8900150

APAC // +852.3127.6811