

WS2/W2000 Apple Charging Module ZW1041



- 1** Remove the adhesive from the bottom of the WS2/W2000 wearable stand.



- 2** Route the stand's power cable down through the hole in the base of the Charging Module.



- 3a** Place the stand onto the Charging Module base.



- 3b** If using with a WS2 exposed cable stand, ensure that the sensor cable emerges through the opening in the back of the Charging Module. Do not route the sensor cable through the hole in the bottom of the charging module.




- 4** Ensure that the screw holes are aligned.



- 5** Insert the small screw into the hole.



- 6** Tighten the screw using a Philips head screwdriver.

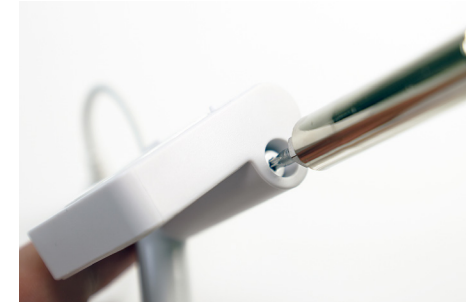

- 7** Use a TT8 bit to loosen the screw holding the old cradle to the stand.

WS2/W2000 Apple Charging Module ZW1041



8 Remove the old cradle.



9 Place the Charging Module cradle onto the stand.



10 Insert the long screw into the hole in the side of the cradle.



11 Tighten the screw using a TT8 bit.



12 insert the small plug into the screw hole.



13 Use the provided alcohol wipe to clean the area where the stand will be placed. Allow it to dry completely.



14 Use the alcohol wipe to clean the stem. Allow it to dry completely.



15 Place the cable manager over the Charging Module cable.

WS2/W2000 Apple Charging Module ZW1041



- 16 Peel the clear film from the 2 adhesives on the cable manager.



- 17 Align the cable manager to the stem. Adjust the cable so that the slack emerges from the top of the cable manager.



- 18 Press the cable manager against the stem for at least 10 seconds.



- 19 **Optional:** Route the stand's power cable through a hole or slot in the fixture.



- 20 Peel the clear film from the adhesive on the base of the Charging Module.



- 21 Place the stand onto the fixture and apply pressure for at least 10 seconds.



- 22 Plug the stand's power cable into power appropriate for the stand.
- PS515 for W2000 stands.
 - Powered Zips Alarm Units or S2865 Power/Alarm Boxes for WS2 stands.



- 23 The position is now ready to be merchandised. Consult the instructions include with your sensor for full installation information.
- Note:** Ensure that the band clamp used does not contain any magnets as this may cause interference with the Charging Module.

SD0972 Rev0 08/01/24